



No.	Code name	Name	No.	Code name	Name
1	B40-01-300	BARREL COLLAR ASSEMBLY	35	B40-07-00	STOCK ASSEMBLE
2	B40-01-5	BARREL	36	B40-00-9	SAFETY
3	B21-03-1A	WASHER	37	B40-00-10	SAFETY SPRING
4	B40-03-2	PISTON SCREW	38	B40-00-7	SHORT JOINT PIN
5	B40-03-3	PISTON SEAL	39	B40-00-6	LENGTH JOINT PIN
6	B40-03-1	PISTON	40	B40-00-100	LEADER ASSEMBLY
7	B40-01-4	BUSHING TUBE	41	B40-00-5	JOINT SCREW
8	B40-02-1	SCREW HOLDER	42	B40-04-2	BIG SPRING TUBE WASHER
9	B40-00-1	BARREL NUT	43	GB/T70-1985 M4×12	SCREW
10	GB/T819-1985 M5×10	SCREW	44	B40-00-8	TRIGGER BLADE WASHER
11	B40-02-6	SAFETY BASE SCREW	45	GB/T70-1985 M6×30	SCREW
12	B40-02-4	SAFETY SPRING	46	B40-04-100	PISTON SPRING TUBE ASSEMBLY
13	B40-02-5	SAFETY BASE PIN	47	B40-04-1	SMALL SPRING TUBE WASHER
14	B40-02-3	SAFETY	48	B18-04-1A	PISTON SEAL
15	B40-02-2	SAFETY BASE	49	B40-00-4	PISTON SPRING
16	GB/T873-1986 3×12	RIVET	50	B40-00-2	PISTON SPRING BUSH
17	B40-05-5	LEFT SIDEBOARD	51	B40-00-11	LINK SLIDING BASE
18	B40-05-9	PISTON SEAR LEVER	52	GB/T820-1985 M5×16	SCREW
19	B40-05-2	TRIGGER BLADE	53	GB/T862.2-1987 5	WASHER
20	GB/T873-1986 2×5	SLIDING CYLINDERICAL PIN	54	B40-06-2	RAM
21	B40-05-10	PISTON SEAR LEVER SPRING	55	B40-00-12	PULL PIN
22	B40-05-11	HOOK	56	B40-06-1	LINK PIN
23	B40-05-7	BUSH	57	GB/T896-1986 3	SPLIT COLLAR
24	B40-05-1	JOINT PIN BUSER	58	B40-06-6	PULL BOARD
25	B40-05-6	RIGHT SIDEBOARD	59	B40-06-7	PULL BOARD PIN
26	B40-05-3	TRANSMISSION BLOCK	60	B40-06-5	PULL BASE
27	B40-05-13	CLAMPING BLOCK	61	B40-06-3	PULL COLLAR
28	B40-05-8	BUSHING BLOCK	62	B40-06-4	PULL
29	GB/T78-1985 M5×6	SCREW	63	GB/T70-1985 M4×16	SCREW
30	B40-05-4	ADJUSTING SPRING	64	B40-01-7	LOCATIVE SPRING
31	B40-05-12	TRIGGER BLADE	65	B40-01-6	PULL LOCATED BASE
32	B40-05-14	TRIGGER BLADE SCREW	66	GB/T308-1989 8	STEEL BALL
33	B40-02-7	MAIN CYLINDER ASSEMBLY	67	GB/T879-1986 2.5×6	SLIDING CYLINDERICAL PIN
34	B40-00-4	CYLINDER REAR BASE	68	B40-01-1	LOCATED WASHER