



No.	Code name	Name	No.	Code name	Name
1	B50-01-00	Muzzle end	34	B50-00-7	Cylinder end cap
2	GB77-85-M4×3	Muzzle end screw	35	GB3452.1-82-17×2.65	"O" ring
3	B50-02-100[B]	Barrel combing	36	B50-00-1	Cylinder clamp
4	GB70-85-M3×12	Screw	37	B50-03-1	Male snap connector
5	B50-00-3	Pin	38	B50-03-2	Valve
6	GB70-85-M3×16	Screw	39	GB3452.1-82-2.8×1.8	"O" ring
7	GB/T80-1985-M4×3	Screw	40	B50-03-100[B]	Washer
8	B50-02-1	Steel ball spring	41	B50-03-3	Male snap connector seat
9	GB/T308-1989 3	Steel ball	42	B50-03-200	Filter
10	B50-04-00	Loading bolt combing	43	GB3452.1-82-	"O" ring
11	B50-03-4	Cylinder tube	44	GB73-76-M6×14	Screw
12	B50-03-5	Link pin	45	B50-00-11	Nut
13	GB3452.1-82-4.5×1.8	"O" ring	46	B50-00-13[B]	Sear
14	B50-00-2	Bush	47	GB819-85-M3×16	Screw
15	GB819-85-M5×6	Screw	48	B50-00-14	Sear pin
16	GB77-85-M4×5	Screw	49	GB77-85-M3×16	Screw
17	B50-03-14	Main spring seat	50	B50-00-5	Trigger chassis
18	GB3452.1-82-	"O" ring	51	GB819-85-M3×5	Screw
19	B50-03-15[B]	Firing valve spring	52	B50-00-15[B]	Trigger lever
20	B50-03-13	Firing valve bush (front)	53	B50-00-4	Trigger lever spring
21	B50-03-500[B]	Firing valve	54	GB77-85-M3×20	Screw
22	B50-03-16[B]	Firing valve body	55	B50-00-16	Trigger
23	GB3452.1-82-	"O" ring	56	GB77-85-M3×12	Screw
24	B50-03-17	Firing valve bush (rear)	57	B50-00-6	Trigger spring
25	B50-03-18	Striker guide rod	58	B50-05-1	Stock
26	B50-03-6	Striker pin	59	B50-00-12	Stock screw washer
27	B50-03-19	Striker	60	GB70-85-M6×20	Screw
28	B50-03-7	Main spring seat	61	GB6172-86-M6	Nut
29	B50-03-8[B]	Main spring	62	GB65-85-M6×12	Screw
30	B50-03-9	Cylinder seat	63	B20-00-13	Trigger guard
31	B50-00-8	Safety spring	64	GB100-86-3.5×20	Screw
32	B50-00-9	Safety	65	B50-05-100	Butt pad
33	B50-00-10	Screw			